

## 【How to find the serial number】


The serial number is 6 to 8 digit number which is labeled or incised on the robot, aligner, and controller. It is labeled or incised mainly on the parts shown below.

\* There may be some differences depending on the model

### ● Robot




Labeled or incised mainly on the lower part of connectors.

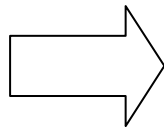

### ● Aligner



Labeled or incised mainly on the lower part of connectors.

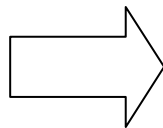

### ● Controller



Labeled or incised mainly on the lower part of the side of LED.

